

Servicing Dynamic DVT TPMS Sensors



Vehicles with Dynamic DVT Sensors installed that are in need of tire repair or replacement, require the use of the proper replacement valve stem when servicing.

Correct Sensor / Valve Stem Combinations

Dynamic Pro-Select Series "2"



DVT-P3152

6-207A



 
DVT-P4332

6-225



DVT-P4332W

6-203



6-225B



Dynamic Pro-Select Series "1"



DVT-P3151

DVT-CV-1



DVT-P4331

DVT-SV-2



Dynamic Multi-App Sensors

- DVT-1000
- DVT-1001H
- DVT-1002H
- DVT-1003A
- DVT-1004A
- DVT-1005
- DVT-1006
- DVT-1007



DVT-CV-1



DVT-SV-1



TPMS Tech Support 1-800-805-4058